



PRODUCTNOTE


Setting UDG/UCG thermostats to use a 10 KOhm NTC Sensor:

The following setup must be used in order to have correct temperature control on the UDG/UCG thermostats.


Press the programme button




1. Select Settings:

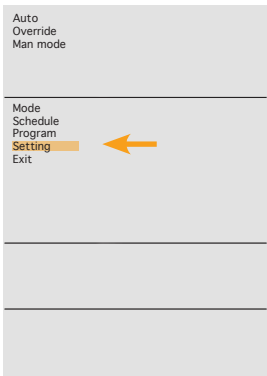


2. Select Offset temperature:

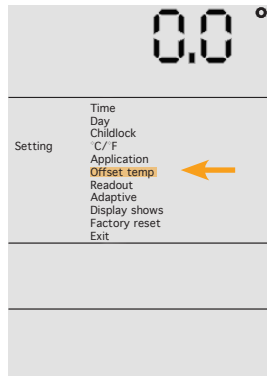


3. Set the offset to -4,5° C or -8.1° F

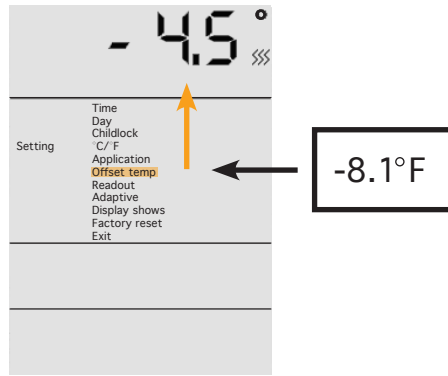

4. Select Exit

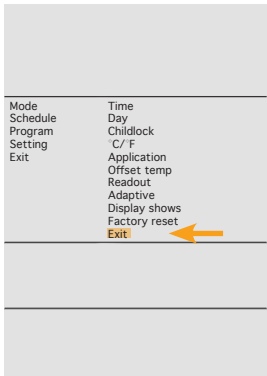

5. Select Main Exit

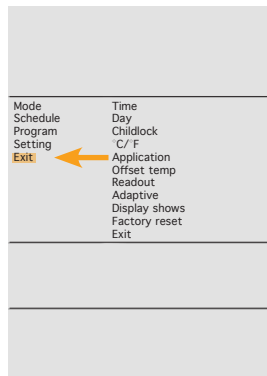

© Copyright 2011 by OJ Electronics A/S. ® The trademark is registered and belongs to OJ Electronics A/S OJ Electronics A/S reserves the right to make any changes without prior notice.

OJ ELECTRONICS A/S
STENAGER 13B
DK-6400 SØNDERBORG
DENMARK

T. +45 73 12 13 14
F. +45 73 12 13 13
OJ@OJELECTRONICS.COM
WWW.OJELECTRONICS.COM


OJ ELECTRONICS
taking comfort further