




Before installing or using this product, you must read and understand these guidelines and set them aside for future reference. The manufacturer cannot be held liable for anything, and the warranty will be void if the installer or the user does not comply with these guidelines.


Failure to follow these guidelines may result in bodily injury, property damage, serious injuries, or potentially fatal electric shocks. Turn off the power to the device at the circuit breaker or fuse before installation, repair, or cleaning. Make sure the device is designed for the intended use (if necessary, refer to the product catalog or a representative).

# 1 REMOVAL OF THE DEFECTIVE TIMER


1. Remove the thermostat and timer knobs and set them aside.
2. Slightly loosen the screw at the bottom of the front panel (**Figure 1**). Tilt the bottom of the panel to release it and slide it upwards to remove it. Set it aside.

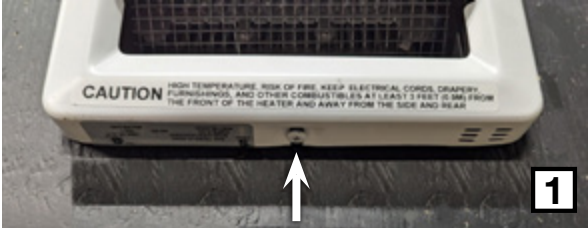

3. Remove the mechanical housing by unscrewing the two (2) screws (**Figure 2 A-B**).
4. Remove the timer and electrical insulation by unscrewing the two (2) screws (**Figure 2-C-D**).

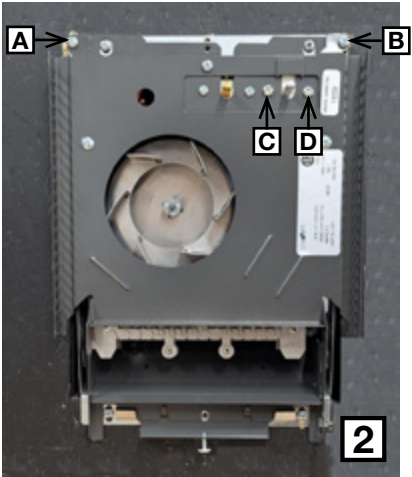

5. Disconnect the wires from the timer (**Figure 3-A-B-C-D**).

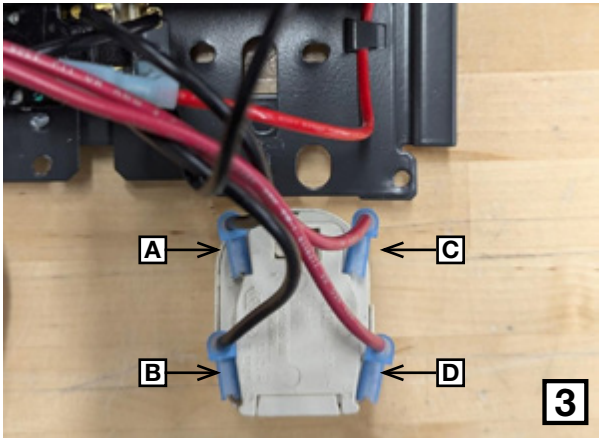

## 2

### INSTALLING THE NEW TIMER

6. Take the new timer out of its packaging.
7. Connect the wires as illustrated (**Figure 3-A-B-C-D**). Refer to the diagram provided with the replacement kit.
8. Align the timer and electrical insulation holes with the two holes and screw them in using the provided screws.
9. Repeat **steps 1 through 3** in reverse order.

ELECTRICAL DIAGRAM OF INSTALLATION WITH THERMOSTAT AND TIMER

