

°STELPRO

360 comfort

D070

REMOTE PLENUM THERMOSTAT

Caution:


Turn off the thermostat and all the connected electrical devices (e.g. a heater) before the installation. The thermostat must be installed by a qualified person.

INSTALLATION :

1. Thermostat location:

The thermostat must be installed indoor only. It should be mounted on a wall, or on the plenum and should be connected to CIR-048 appropriate terminals (entrée potentiomètre) as shown in this wiring diagram below:

2. Wiring diagram:

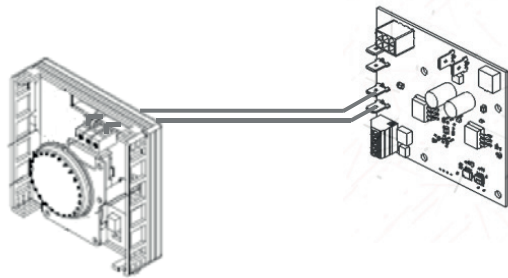

D070

CIR-048

3. Mounting:

REMOVING THE COVER:

- Using a screwdriver, loose the screw at the bottom of the unit, without removing it (see **diagram 1**).
- With a screwdriver, gently pull the lock hook upwards, and remove the front cover by tilting it upwards (see **diagram 2**).

MOUNTING:

- Ensure the mounting surface is levelled.
- Route the wires in the terminal block.
- Insert the two wall anchors into the wall.
- Secure the thermostat to the wall with the two screws provided (see **diagram 3**).

ELECTRICAL CONNECTIONS:

- Make the proper electrical connections according to the circuit diagram.
- Afterward, push all the wires back into the wall.

PUTTING BACK THE COVER:

- Align the rotating knob.
- Put back the cover and ensure the top locks are fastened (see **diagram 4**).
- Gently press the cover and tighten the screw at the bottom of the unit (see **diagram 5**).

4. TEMPERATURE SETTING UP:

Select the temperature by rotating the thermostat knob.

5. Specifications:

Adjustment range:	-20°C to 70°C (-5°F to 160°F)
Operating temperature:	0°C to 45°C (32°F to 113°F)
Degree of protection:	IP20
Voltage:	24 VAC

