

BUILT-IN THERMOSTAT INSTALLATION

CBHT1 SERIES SINGLE POLE THERMOSTAT

WARNING

Before installing and operating this product, the user and/or installer must read, understand and follow these instructions and keep them handy for future reference. If these instructions are not followed, the warranty will be considered null and void and the manufacturer deems no further responsibility for this product. The following instructions must be adhered to in order to avoid personal and serious injuries, property damages and potentially fatal electric shocks. Switch off the power at the circuit breaker/fuse before installing, repairing and cleaning the unit. Make sure the unit is appropriate for the intended use (if needed, refer to the product catalog or a representative).

1. Remove access cover to the control box of heater.
2. Install the thermostat on the bracket. FIG. 1
3. Connect the two black wires supplied with the kit to the thermostat terminal. FIG. 2
4. Insert a white insulation sleeve on the wire coming out of the thermostat. FIG. 3
5. Fix the bulb in place on the motor housing with the plastic support provided in the kit. FIG. 4
6. Connect one black wire from the thermostat to block C and the other black wire to block 1, FIG. 5 (or see electrical diagram).
7. Re-install access cover to control box.

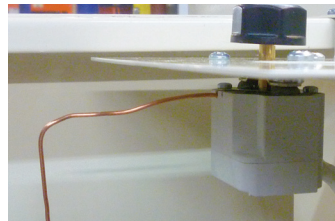


FIG. 1



FIG. 2



FIG. 3

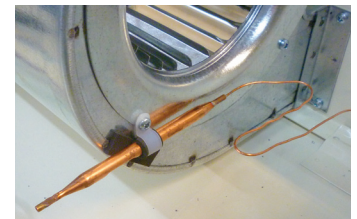


FIG. 4



FIG. 5

