

°STELPRO

BUILT-IN THERMOSTAT KIT FOR ASSO SERIES WALL FAN HEATER



SONOMA[™]
IT'S GOT BRAINS. AND LOOKS.

2 POLES

WHITE

120 V - 600 V


MADE IN MEXICO

ASSOT2W



6 26296 59061 4

WHAT'S IN THE BOX

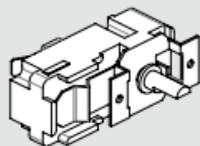

thermostat



knob



2 wist-on
wire connector




2 screws

THIS THERMOSTAT MUST BE INSTALLED BY AN ELECTRICIAN.

The thermostat should be installed prior to wiring your wall fan heater. If the unit is already installed, turn off the power from the electrical panel, remove fan heater front panel and mechanical housing to access the wiring (refer to the owner's manual).


1

Remove front panel cap by pinching both rear snaps simultaneously.

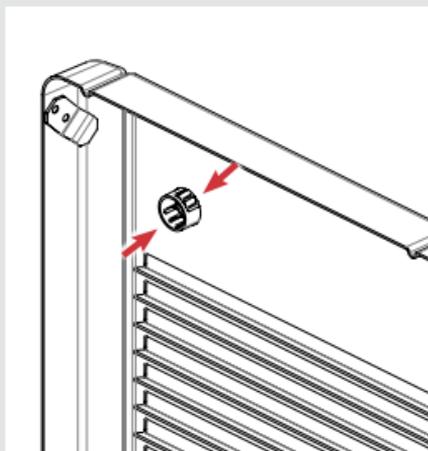


2

Fold up the tab on the mechanical housing in order to free the opening for the thermostat shaft.

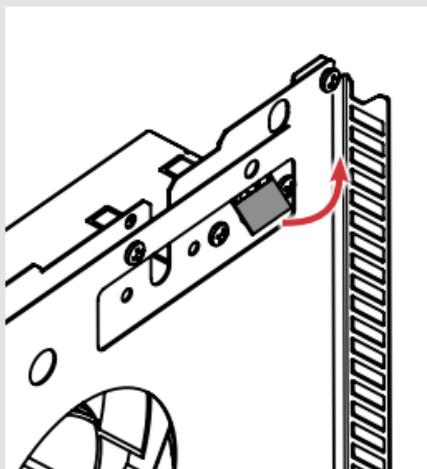
**3**

Match the two oblong holes with the thermostat bracket and secure it in place with the two provided screws.

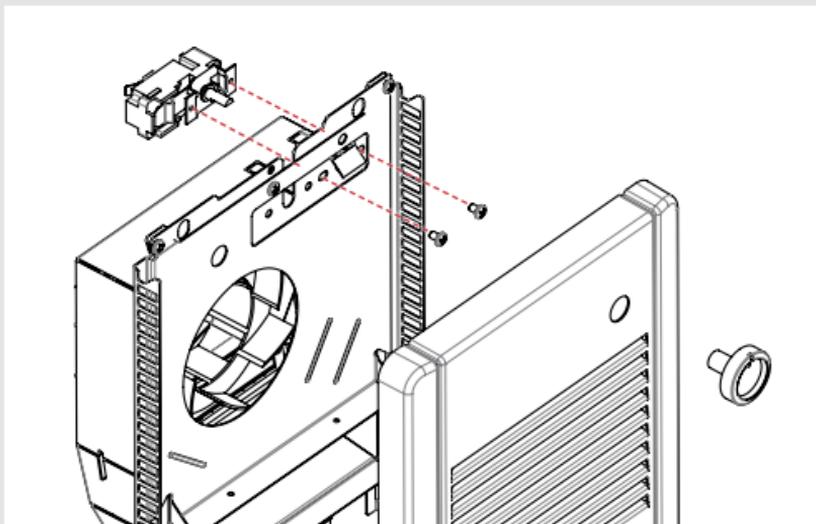

4

Wire the unit as shown on the diagram. To avoid pinching wires as you proceed with the installation, neatly group all the wires on top of the mechanical housing next to the thermostat and secure them using the provided cable tie.

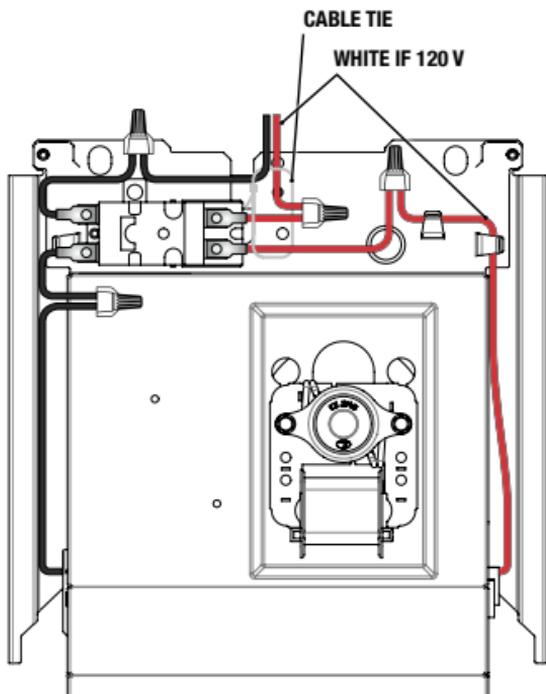

Continue installation or reassemble the unit following the steps as shown in the owner's manual. Install thermostat knob on the shaft.

STELPRO DESIGN INC.

1041 PARENT, ST-BRUNO-DE-MONTARVILLE,
QUEBEC, CANADA J3V 6L7

www.stelpro.com 1-844-STELPRO

Limited warranty: 1 year.
See details at
www.stelpro.com

°STELPRO

BUILT-IN THERMOSTAT KIT FOR ASSO SERIES WALL FAN HEATER



SONOMA™
IT'S GOT BRAINS. AND LOOKS.

ASSOT1W

1 POLE


WHITE

120 V - 600 V

MADE IN CHINA



WHAT'S IN THE BOX

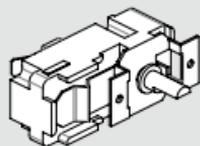

thermostat



knob



1 wist-on
wire connector




2 screws

THIS THERMOSTAT MUST BE INSTALLED BY AN ELECTRICIAN.

The thermostat should be installed prior to wiring your wall fan heater. If the unit is already installed, turn off the power from the electrical panel, remove fan heater front panel and mechanical housing to access the wiring (refer to the owner's manual).


1

Remove front panel cap by pinching both rear snaps simultaneously.

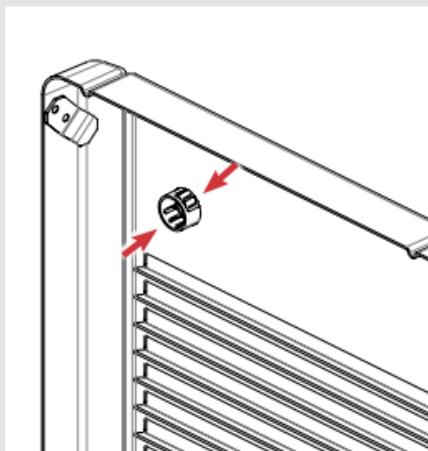


2

Fold up the tab on the mechanical housing in order to free the opening for the thermostat shaft.

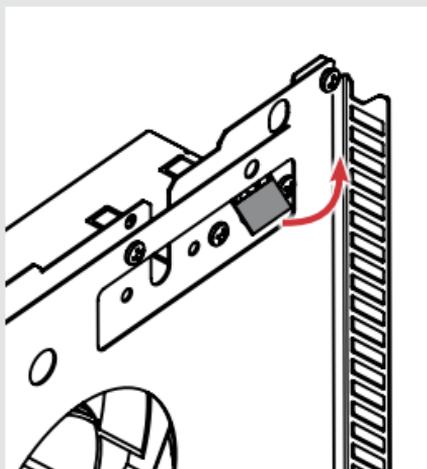
**3**

Match the two oblong holes with the thermostat bracket and secure it in place with the two provided screws.

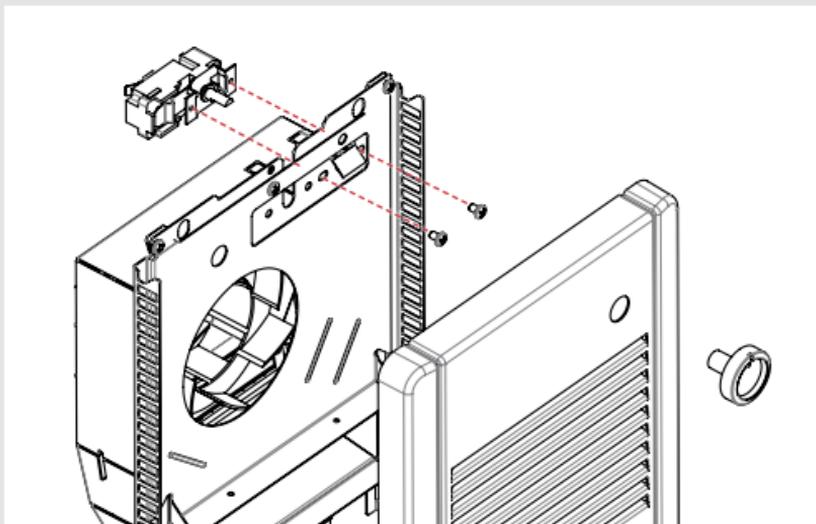

4

Wire the unit as shown on the diagram. To avoid pinching wires as you proceed with the installation, neatly group all the wires on top of the mechanical housing next to the thermostat and secure them using the provided cable tie.

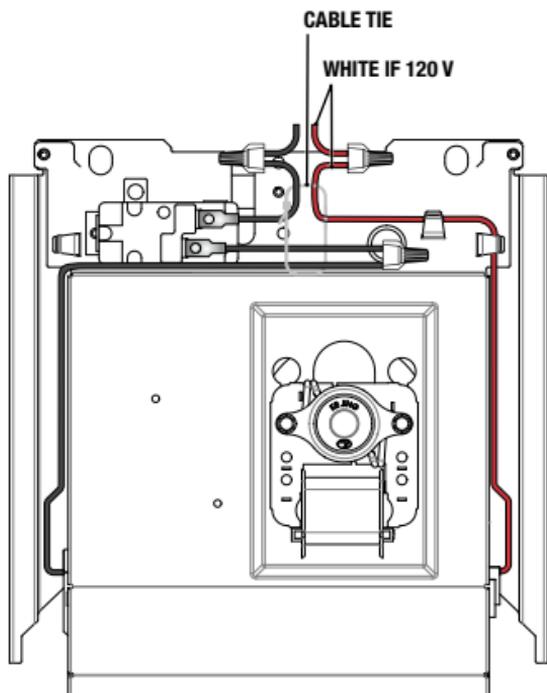

Continue installation or reassemble the unit following the steps as shown in the owner's manual. Install thermostat knob on the shaft.

STELPRO DESIGN INC.

1041 PARENT, ST-BRUNO-DE-MONTARVILLE,
QUEBEC, CANADA J3V 6L7

www.stelpro.com 1-844-STELPRO

Limited warranty: 1 year.
See details at
www.stelpro.com